



DERYAN Beachtent XXL

- User manual -

WARNING

Fold the article correctly. Do not use force if you are having trouble folding as this can cause the steel frame to wear or bend.

Keep away from fire and heat sources. The tent is made of fire-resistant material, it is NOT fireproof. The fabric will burn if left in continuous contact with a heat source or flame.

- The product may only be installed by adults.
- Open carefully, the spring frame may open.
- Never leave a child/baby unattended in the tent.
- Do not leave a baby/child in the tent for more than 45 minutes without a break.
- Mesh does not protect against UV.



BENEFITS

- 50% UV protection
- Lightweight
- Easy to use
- Includes ground pegs
- Includes bags to optimize firmness with sand


OPENING

1. Carefully remove the tent from the bag.
2. Keep the item away from your face and body when opening. The strong opening force is strong enough to hurt you.
3. Open the tent on a flat floor.
4. Insert the floor pegs into the floor through rings at the bottom of the tent.


FOLDING

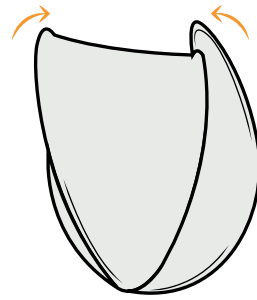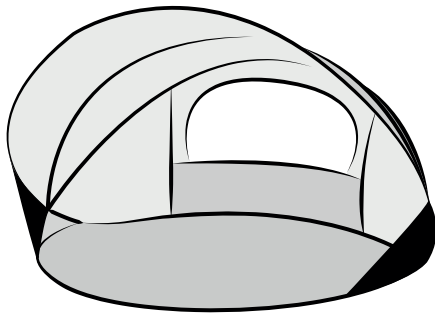


1. Grab the corners of the tent

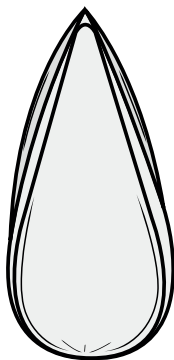


2. Pull the sides to the centre

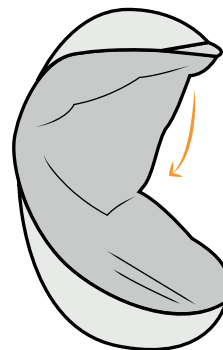


3. Push the outer side inwards

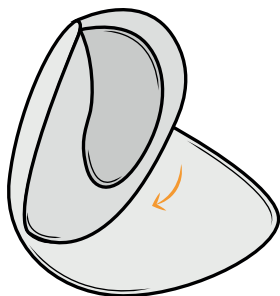

4. Connect the upper part with the bottom part as shown above

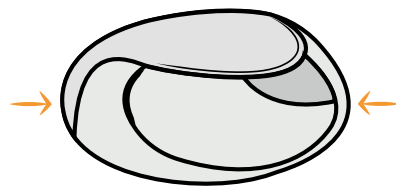

5. Twist the tent into a circle

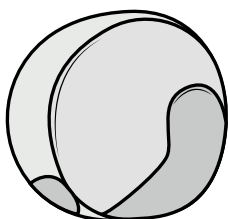

6. Ensure that it fits snugly



7. Place the tent inside the bag